


ASSEMBLY INSTRUCTION

INSTRUCCIONES DE MONTAJE

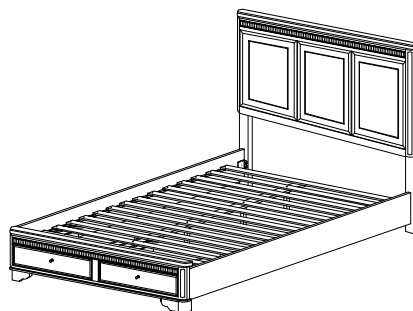

COLLECTION
JADE

SKU #
B148

DESCRIPTION
QUEEN BED

CAUTION:

Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tiep can cause injury, therefore, for your protection, please remove any exposed staple used in packing.

1. We recommend that you should assemble this product with the assistance of another person;
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly, and follow the assembly step to assemble your newly purchased product correctly and efficiently.

PRECAUCIÓN:

Por favor, lea detenidamente las instrucciones antes de desembalar las piezas de montaje. Las puntas afiladas y expuestas de las grapas pueden causar lesiones; por lo tanto, para su protección, retire cualquier grapa expuesta utilizada en el embalaje.

1. Le recomendamos que realice el montaje de este producto con la ayuda de otra persona.
2. Asegúrese de revisar con atención todos los materiales de embalaje en busca de piezas pequeñas que pudieran haberse soltado dentro de la caja durante el transporte.
3. Por favor, coloque todas las piezas sobre una superficie no abrasiva antes de comenzar el montaje y siga los pasos de las instrucciones para ensamblar su producto recién adquirido de manera correcta y eficiente.

PIEZAS DE HARDWARE:

PIEZAS DE HARDWARE:

1) JCBC M6 x 35mm 6 PCS	2) M6 SPRING WASHER 6 PCS	3) M6 FLAT WASHER 6 PCS	4) ALLEN KEY M4 1 PC	5) ALLEN KEY M5 1 PC	6) CSK SCREW M4 x 32mm 28 PCS	7) JCBC M6 x 50mm 4 PCS
--------------------------------------	--	--------------------------------------	-----------------------------------	-----------------------------------	--	--------------------------------------


PARTS PIECES:

PIEZAS:

A. Headboard x 1 	B1. Headboard Leg - R x 1 	B2. Headboard Leg - L x 1 	C. Footboard x 1 	D. Side Rails x 2
E. Slats x 14 	F. Center Rail x 2 	G. Slats Center Support Legs x 4 	H. Footboard Center Support Legs x 2 	

ASSEMBLY INSTRUCTION

INSTRUCCIONES DE MONTAJE

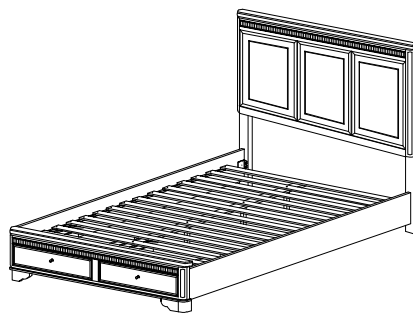

COLLECTION

JADE


SKU #

B148

DESCRIPTION


QUEEN BED

Exploded View

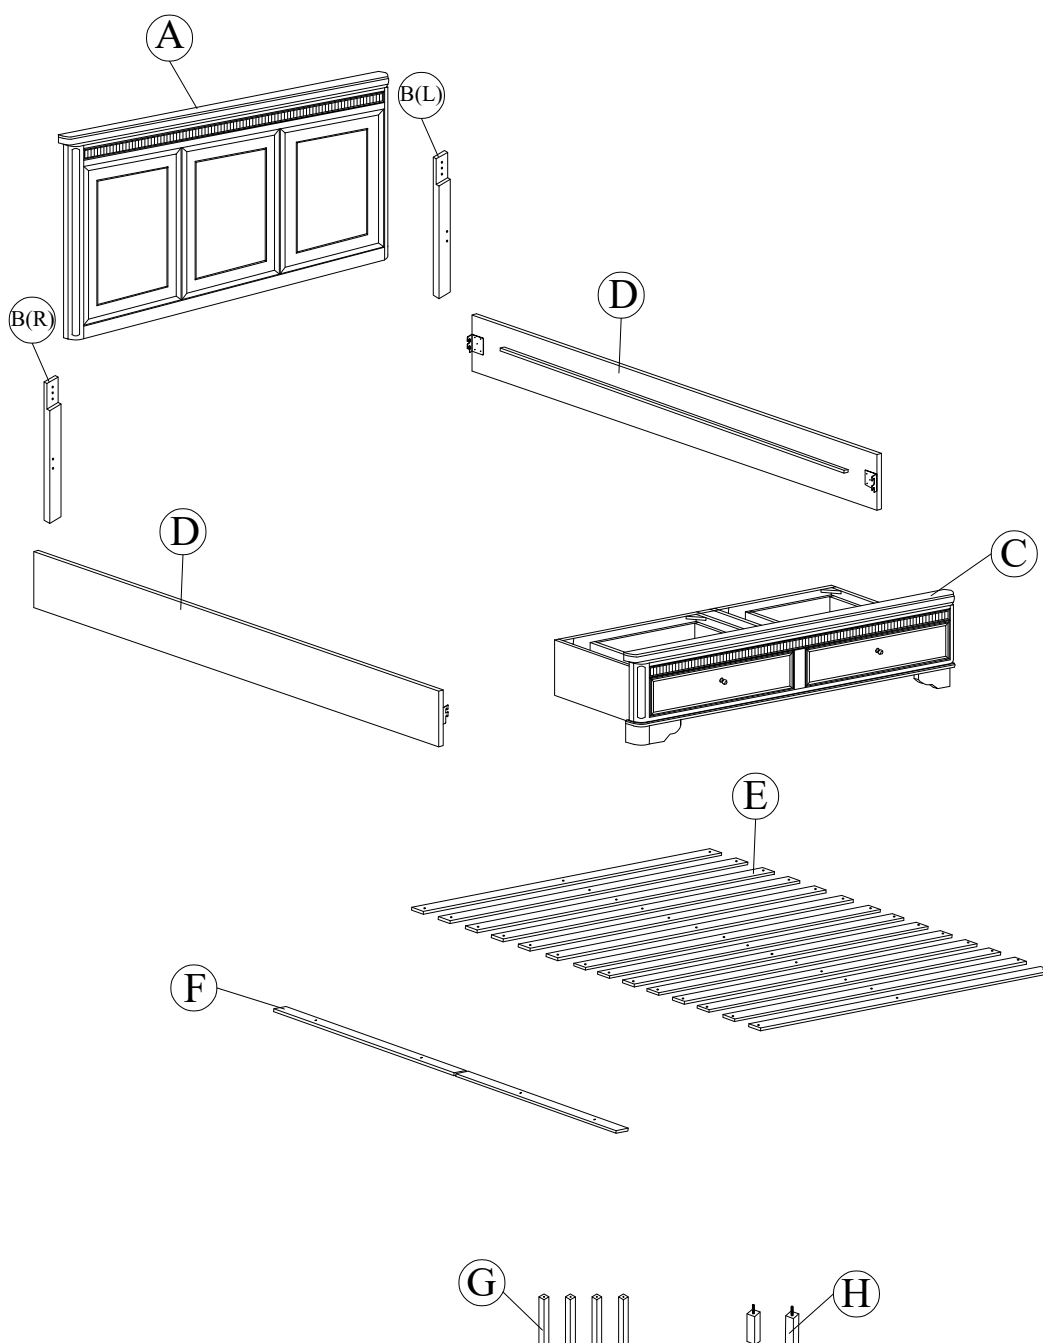



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

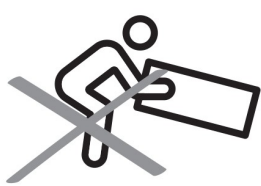

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

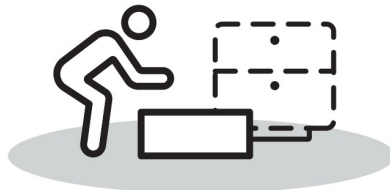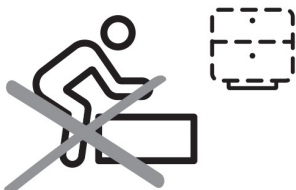

Suitable Location

Assembling near the area of the intended location is highly recommended.



Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.




Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

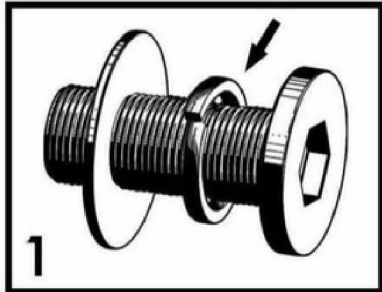


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

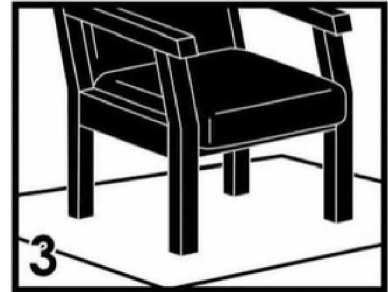


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

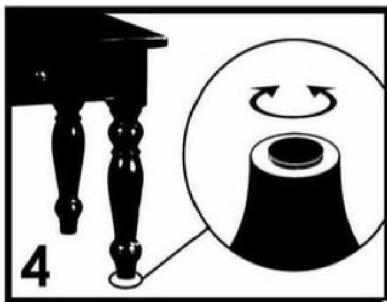

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

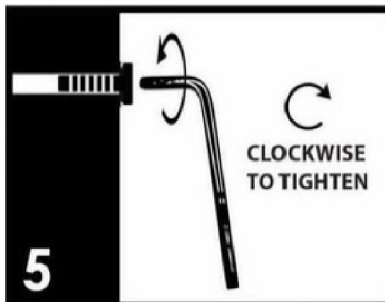

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

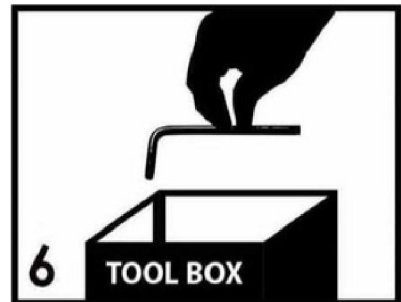

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

ASSEMBLY INSTRUCTION

INSTRUCCIONES DE MONTAJE

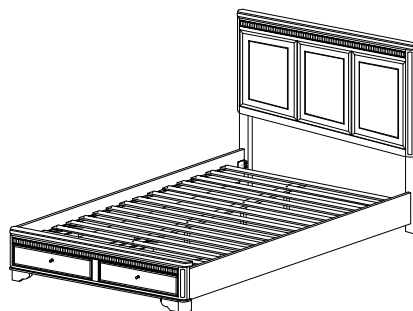

COLLECTION

JADE

SKU #

B148

DESCRIPTION

QUEEN BED



STEP 1 : PASO 1

Back view:

Attach Headboard Leg (B1) (B2) to Headboard (A) by using JCBC M6 x 40mm (1), M6 Spring Washer (2), and M6 Flat Washer (3) on each headboard leg.




Vista trasera:

Sujete las patas del cabecero (B1) (B2) al cabecero (A) utilizando el tornillo JCBC M6 x 40mm (1), la arandela de presión M6 (2) y la arandela plana M6 (3) en cada pata.

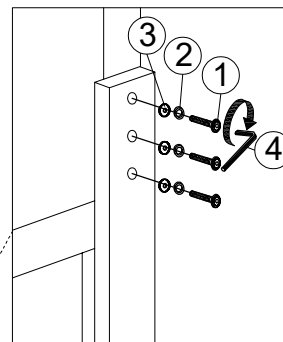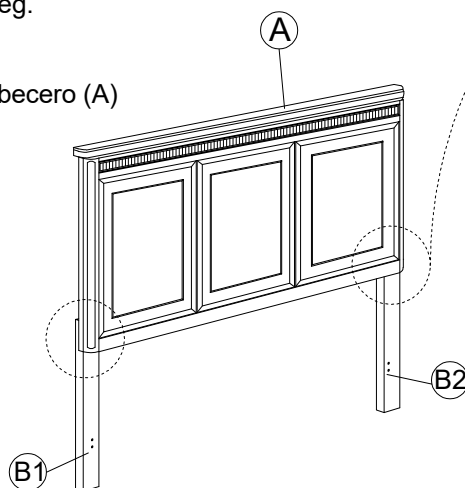

STEP 2 : PASO 2

Bottom View
Vista inferior

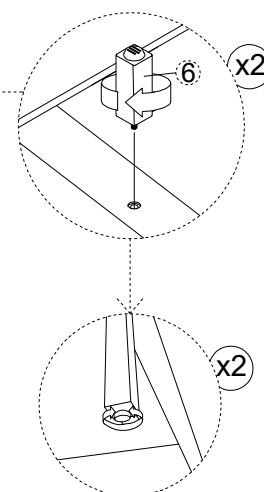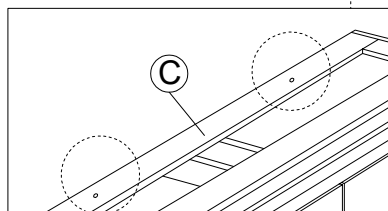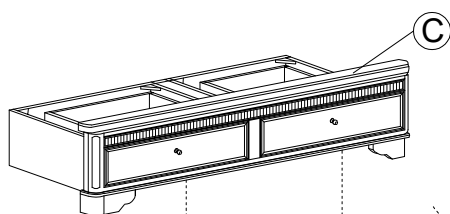

Back view:


Screw the Footboard Support Leg (H) to the bottom of Footboard (2).
Adjust the leveler according to the floor surface

Vista trasera:

Atornille la pata de apoyo (H) a la parte inferior del pie de cama (2).
Ajuste el nivelador según el piso.

ASSEMBLY INSTRUCTION

INSTRUCCIONES DE MONTAJE

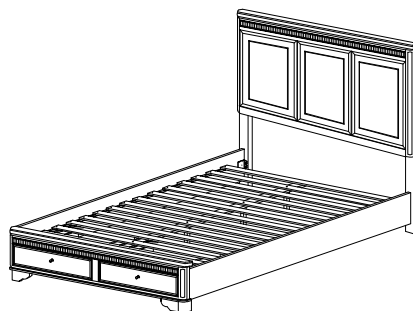

COLLECTION

JADE


SKU #

B148

DESCRIPTION

QUEEN BED


STEP 3 : PASO 3

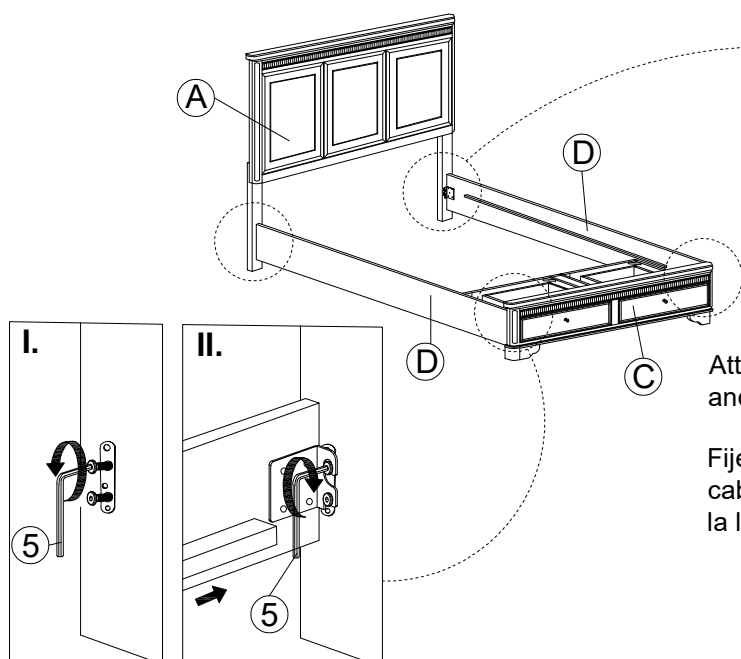

Attach the Side Rails (D) to Headboard Leg (B1) (B2) and Footboard (C) using Allen Key M5 (5).

Fije los rieles laterales (D) a las patas del cabecero (B1) (B2) y al pie de cama (C) utilizando la llave Allen M5 (5).

STEP 4 : PASO 4

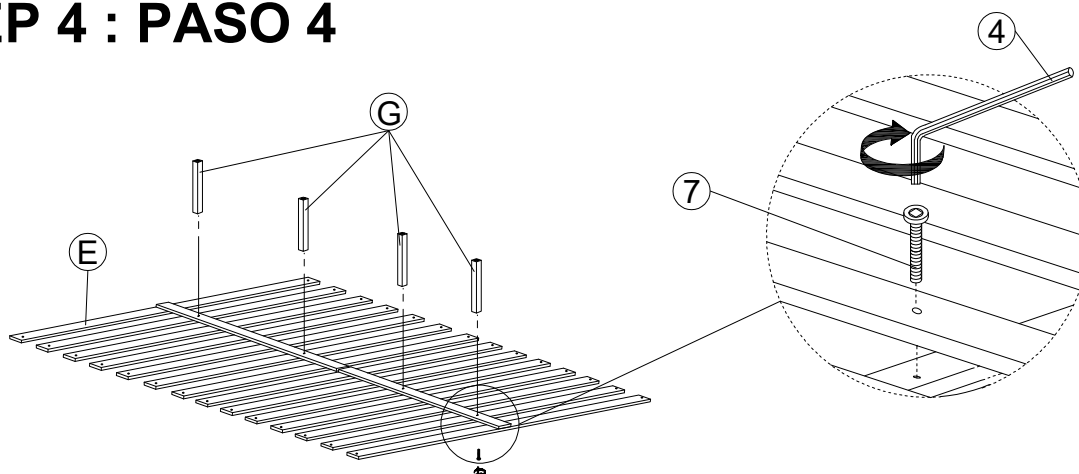


Tighten the JCBC M6 x 50mm (7) through the Slat Leg (E) using the Allen Key M4 (4)

Apriete el perno JCBC M6 x 50mm (7) a través de la pata del listón (E) utilizando la llave Allen M4 (4).

ASSEMBLY INSTRUCTION

INSTRUCCIONES DE MONTAJE

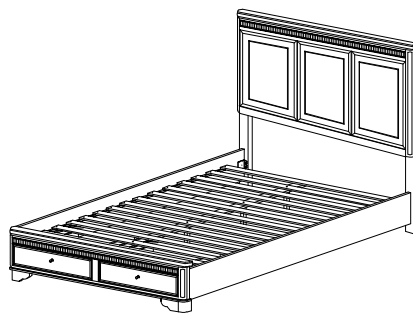

COLLECTION

JADE


SKU #

B148

DESCRIPTION

QUEEN BED

STEP 5 : PASO 5

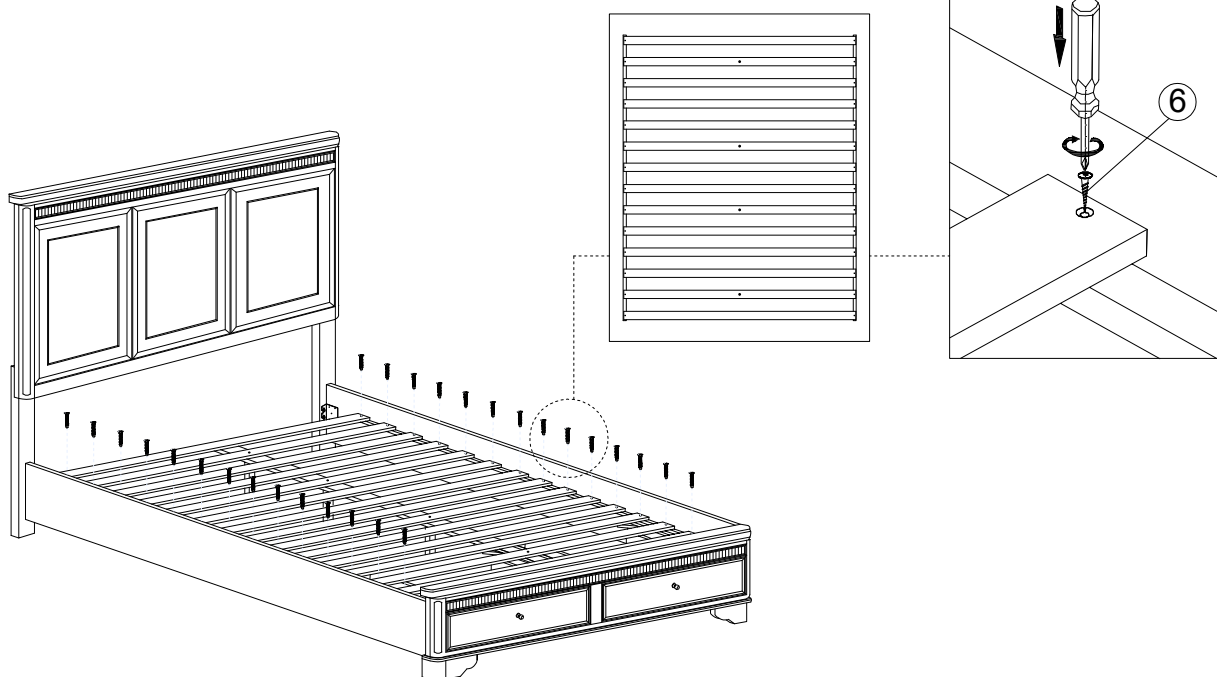


Attach Slat (E) to Side Rail (D) by using CSK Screw M4 x 32mm (6).

Fije el listón (E) al larguero lateral (D) utilizando el tornillo CSK M4 x 32mm (6).

ASSEMBLY INSTRUCTION

INSTRUCCIONES DE MONTAJE

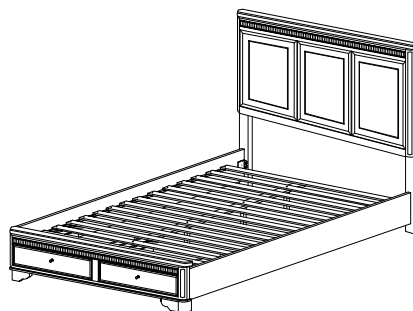

COLLECTION

JADE

SKU #

B148

DESCRIPTION

QUEEN BED

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

